

Application Note

Horizontal menu structure in the Deseo

A horizontal menu

The Deseo room controller was originally designed with a vertical menu structure.

A maximum of 9 menu pages are available. You can scroll through the menu pages pressing up or down. Entering a menu page by pressing right makes the controlling objects available.

In the horizontal menu structure, this menu structure disappears, allowing you direct access to the controlling objects.

You can scroll through the objects by pressing the left and right button.

Deseo hardware requirements

Your Deseo has to be of version 39.16.3 or higher.


The version is displayed on the screen when the Deseo powers up.

How to set-up the horizontal menu?

You can use the existing ETS application V1.3, version 120220 to setup a horizontal menu.

There are 2 important steps to set-up the Deseo with a horizontal structure:

1. The text field of each active Deseo menu page has to be replaced by a number (maximum 9!).
2. 3 dot character (...) have to be added behind number 1 to switch to a horizontal menu.

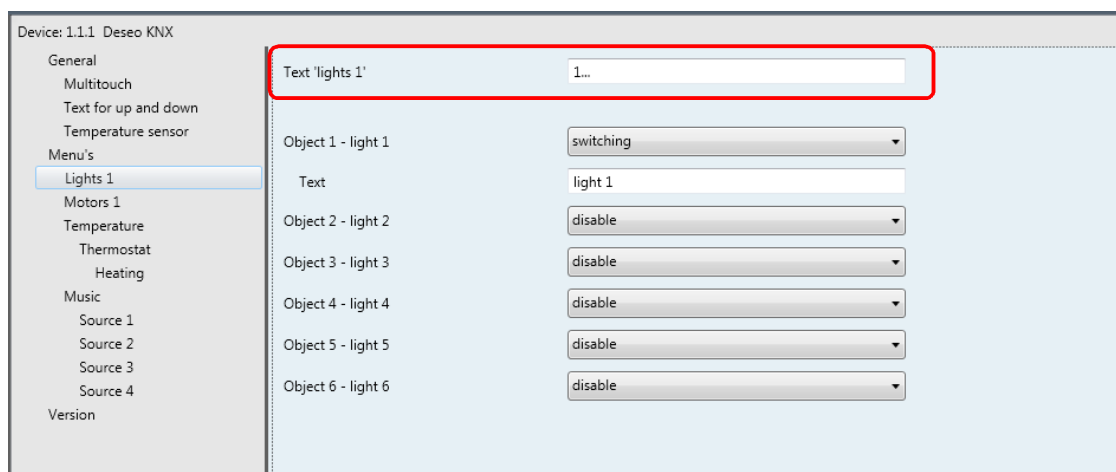

You can choose the sequence of the objects freely.

Number 1 will be the most important, number 2 will follow, ...

The Deseo will always 'wake up' showing the objects of the first menu page (number 1).

In the Deseo you can shift through the sequence of objects from left to right, and also from right to left.

Because of that, the last number will be as important as number 2, as you could enter the Deseo menu and press left to access the last number menu objects.

From a practical point of view, we advise you to only use the horizontal menu when controlling less than 9 objects in total.